

OptiMate 4 LED PANEL INDICATIONS

Numbering as per instruction manual.
CHARGING STARTS AT 3 AND PROGRESSES TO 5,6,7.

